

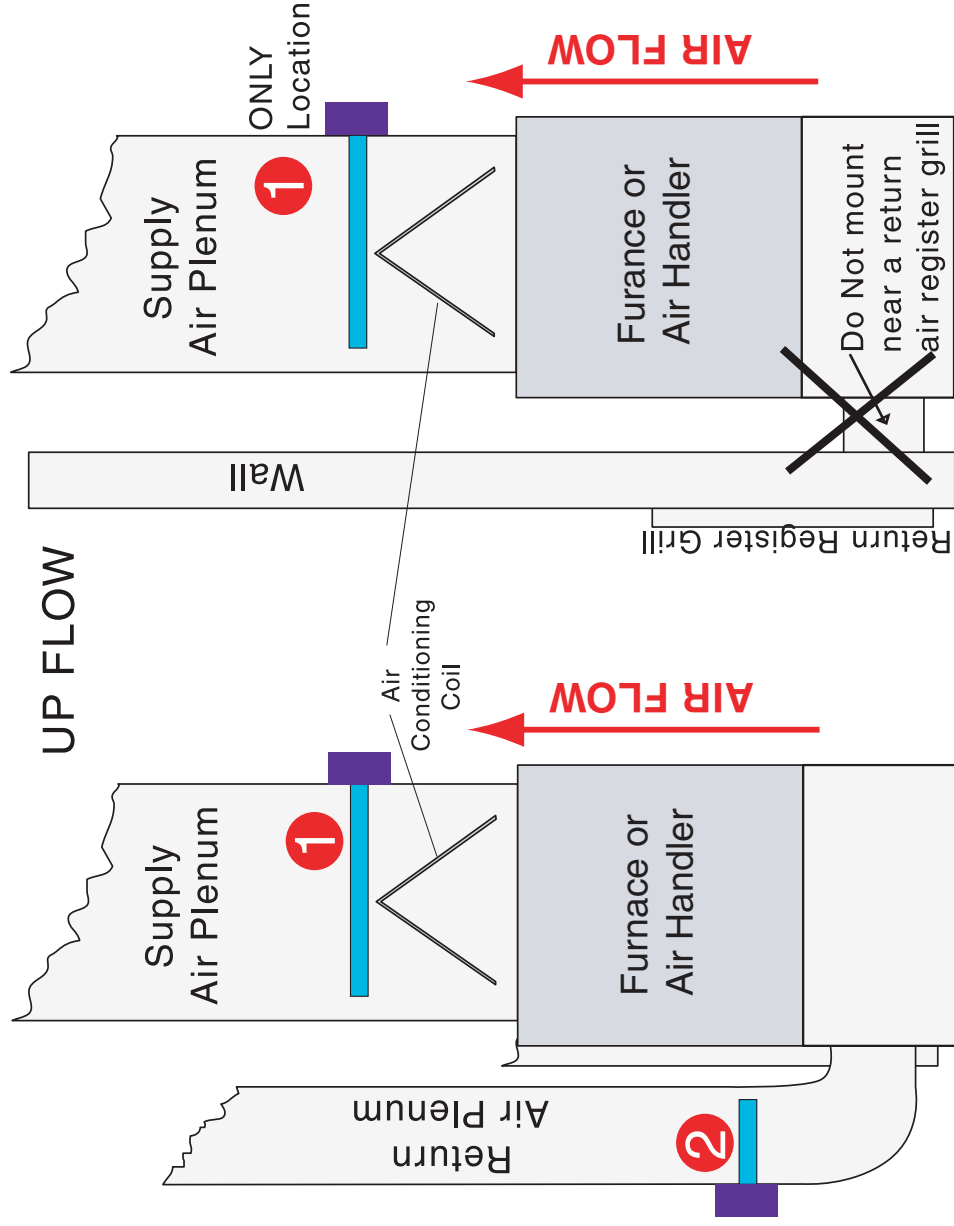
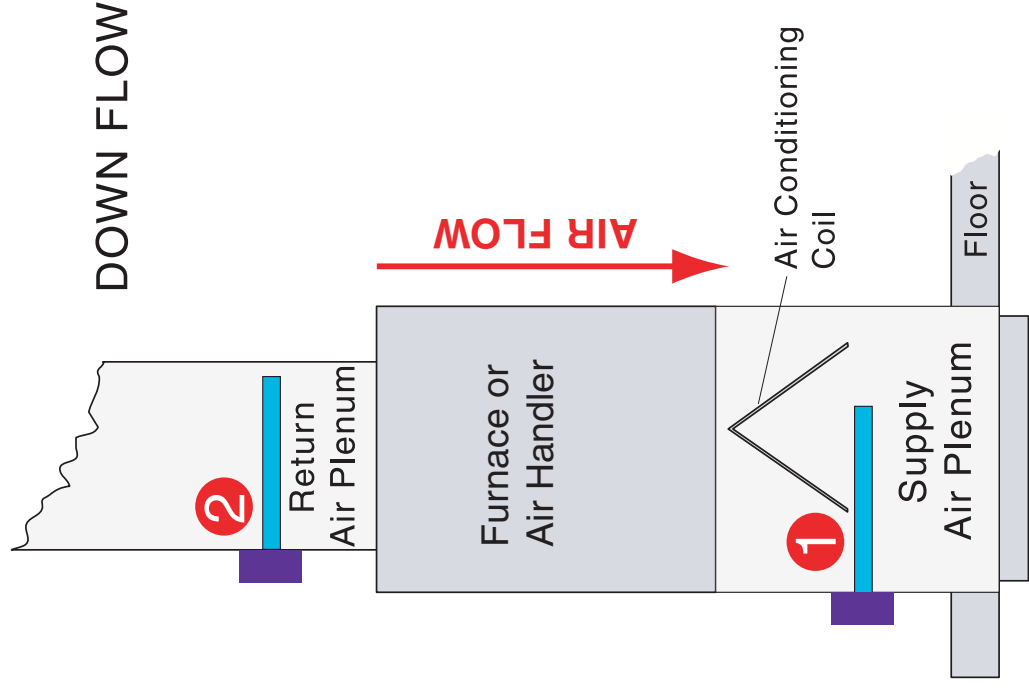


- 1** UV-Aire™ Best Location
- 2** UV-Aire™ Optional Location

## BASEMENT INSTALLATION

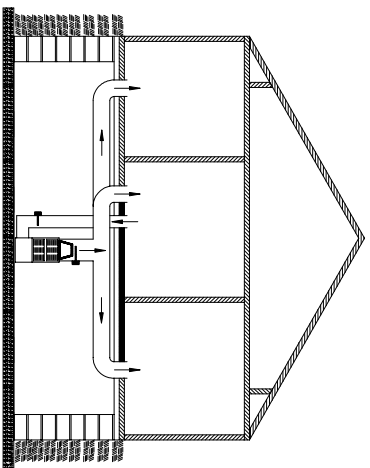


## CLOSET INSTALLATION

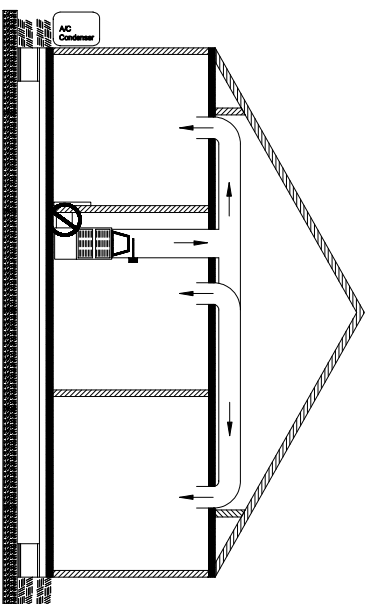


- DO NOT mount near a return air register grill

## PACKAGE SYSTEM OR HEAT PUMP (WITH NO SEPARATE AIR HANDLER)

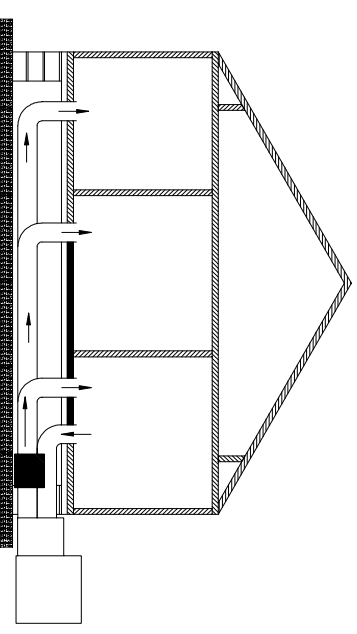


- DO NOT mount unit on plastic flexible duct.
- Mount unit on metal housing if there is a portion of metal duct available.
- If a metal housing is not available, you may need to fabricate a mounting box.


## HEAT PUMP WITH SEPARATE AIR HANDLER

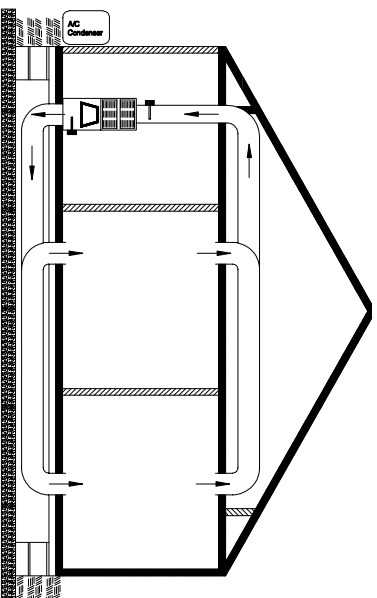

## ATTIC INSTALLATION

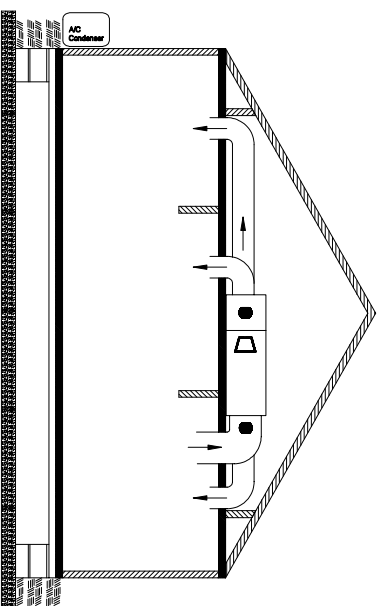

## HEAT PUMP WITH SEPARATE AIR HANDLER (IN THE ATTIC OR CRAWL SPACE)

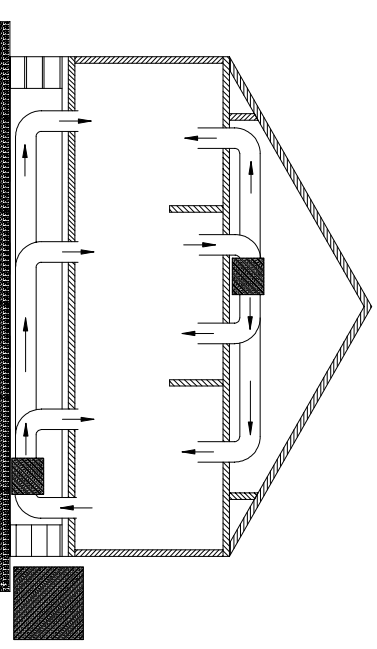

**Step 1:** Identify which type of system you have.

**Step 2:** Determine where your air handler is located.

**Step 3:** Choose best location for installation per diagram on reverse side of this page.