


DRAIN VALVE - REPLACEMENT INSTRUCTIONS



CAUTION : SERVICING

- DISCONNECT MAIN POWER SOURCE BEFORE ACCESSING INTERNAL COMPARTMENTS.
- THE PLUMBING AND ELECTRICAL COMPARTMENTS CONTAIN HIGH VOLTAGE COMPONENTS AND WIRING. ACCESS SHOULD BE LIMITED TO AUTHORIZED PERSONNEL ONLY.
- DURING AND FOLLOWING OPERATION OF THE HUMIDIFIER, THE STEAM COMPONENTS IN CONTACT WITH THE STEAM SUCH AS THE CYLINDER, BLOWER PACK, STEAM LINES, STEAM DISTRIBUTORS, AND CONDENSATE LINES CAN BECOME HOT AND BURN IF TOUCHED.
- NORTEC DOES NOT ACCEPT ANY LIABILITY FOR INSTALLATIONS OF HUMIDITY EQUIPMENT INSTALLED BY UNQUALIFIED PERSONNEL OR THE USE OF PARTS/COMPONENTS/ EQUIPMENT THAT ARE NOT AUTHORIZED OR APPROVED BY NORTEC.

1. Drain cylinder (refer to operation manual).
2. Turn off the unit when the cylinder is empty .
3. Disconnect power to the unit.
4. Remove cylinder.
5. Disconnect spade terminals from the drain valve.
6. Remove the screw holding the green ground wire and the two screws holding the valve to the drain pan.
7. Squeeze the tabs of the spring clamp holding the hose to the drain valve and slide it up the hose. Pull hose from drain valve.
8. Drain valve can be removed and replaced with new one.
9. Reverse steps above to install drain valve.

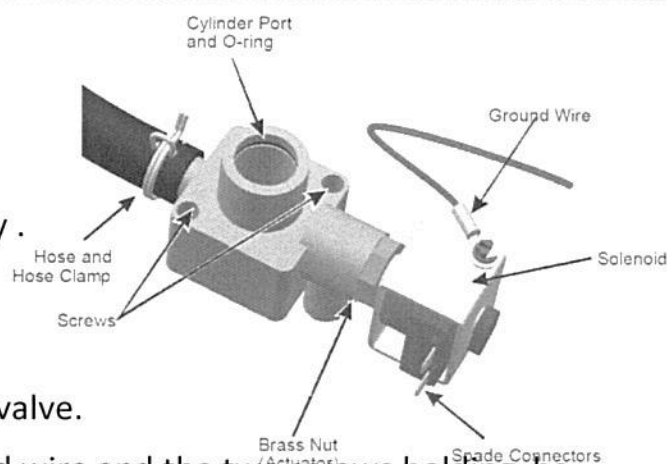

Note :

- a) Replacement hose clamp and screws are provided, if required. The shorter 3/4" long screws are the for Residential Humidifier series, (RH. RH2, RH2+). The longer screw is for all other products.
- b) If replacement ground wire not required reconnect existing ground wire.

For more information on maintenance and replacement, please visit :

[<http://humidity.com/ca/climate/en/humidifiers.html>]